


THE PICTURE SPECIALIST FOR MEMORIAL

TAPE FASTENER INFORMATION AND INSTALLATION

The **3M** VHB tape fastener system

The **3M** VHB tape fastener system must be installed on a clean, flat surface which is free of debris and any greasy substance. Installation must be performed at temperatures above 32°F (0°C).

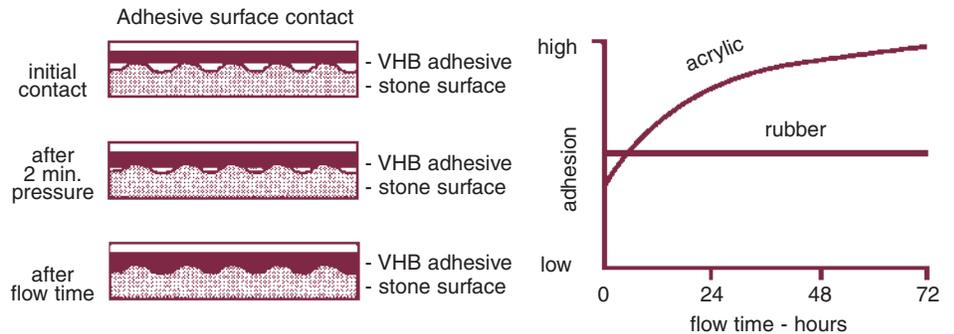

How to clean surfaces

Final cleaning must always be with a mixture of 50% water and 50% rubbing alcohol (isopropyl). Do not use anything else for final cleaning before applying tape. Do not use dirty rags and commercial cleaners (e.g., "Windex" Cleaner).

Where heavy grease, oil or dirt is present, use a de-greasing solvent. **3M** Citrus Cleaner, Mineral Spirits, or Naphtha with a scrub pad are good options. All solvents will leave behind a slight film; therefore, final cleaning must always be with 50/50 water and rubbing alcohol. Wipe dry with a clean cloth or paper towel.

How to install portraits and frames with tape

Our products are shipped to you ready to install (look for the word TAPE written on the back). Simply remove the release liner and install on the monument, making sure you apply a moderate pressure to the portrait for approximately two minutes. All portraits 5" x 7" or larger, as well as frames and covers, are shipped with a special primer.




JADCO FASTENER INSTALLATION

A favorite among memorialists for generations, the Jadco™ fastener is a quick, easy and inexpensive method for securely fastening your Dedo Classic™.

How to install a Dedo Classic using the Jadco fastener

1. Trace outline of portrait on monument;
2. Drill hole $3/8$ " wide and $3/4$ " deep at $7/8$ " above center on vertical or $7/8$ " to left of center on horizontal portraits (figure A);
3. Place fastener in hole and expand with pellets;
4. Slide portrait upward (for vertical) or to the left (for horizontal) with your palm until tang locks in position as per figure B.

We also offer a threaded Jadco(tm) ($5/16$ " wide by 2" long for bolt-through applications).

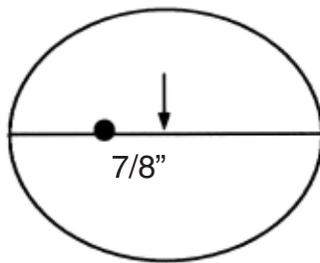

HORIZONTAL

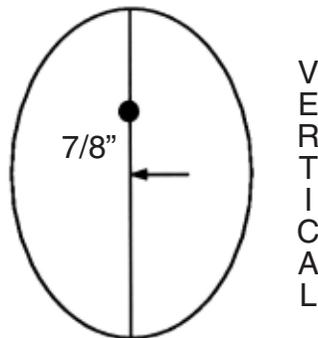


Fig. A

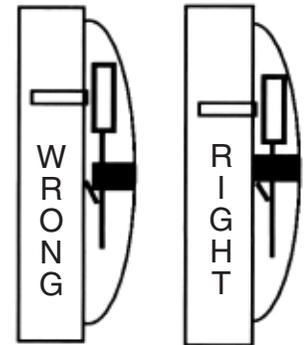


Fig. B

How to remove a Dedo Classic using the Jadco fastener

For removal from Jadco(tm) fastener, slide a hacksaw halway up behind the center of the portrait. Do not lift the portrait more than the thickness of the blade. A click will indicate that the tang has been depressed, at which point you may lower the portrait (please see figure C).

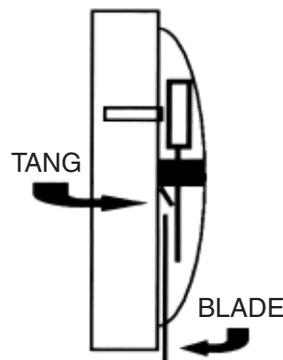


Fig. C